


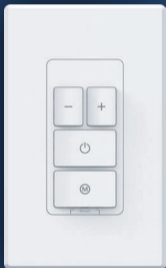

# Digital Dimmer Switch

---

## ■ User Manual



### GET MORE SUPPORT


Should you experience any issues while operating any of our products, you can directly reach out to our Customer Support via Amazon Orders or you can send your inquiry to our Official Customer Support at:

✉ [support@amicolight.com](mailto:support@amicolight.com)

☎ +1(888) 676-1042

Monday - Friday from 9:00AM - 5:00PM (PT)

## INSTALLATION VIDEO

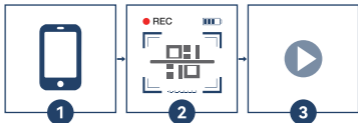

Need a Video Instruction Guide?  
Please scan the QR code.

If the QR code is invalid, please contact us for the video.

## SAFETY INFORMATION

- Turn power off before installation, inspection, or removal. Use all necessary precautions while performing this procedure.
- Consult a qualified electrician to ensure correct branch circuit conductor. Min 90°C supply conductors.
- Properly ground electrical enclosure. IT IS IMPERATIVE THAT THE OUTLET BOX BE PROPERLY GROUNDED.
- DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS, OTHERWISE SAFETY WILL BE COMPROMISED.

## WARNING

This product may represent a possible shock or fire hazard if improperly installed or attached in any way. Product should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).

**RISK OF ELECTRIC SHOCK: TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING.**

**RISK OF FIRE:**

- DO NOT USE WITH CONTROL RECEPTACLE OUTLETS, FLUORESCENT LIGHTING FIXTURES, MOTOR-OPERATED APPLIANCES OR TRANSFORMER SUPPLIED APPLIANCES.
- DO NOT EXCEED ELECTRICAL RATINGS.
- USE ONLY COPPER WIRES WITH THIS DEVICE.
- USE INDOORS ONLY.

## IMPORTANT WIRING INFORMATION






Always follow the recommended wire strip lengths and wiring combinations when connecting wires.

Hold stripped ends next to each other and align frayed strands (do not twist wires).

 
 
Push wires firmly into wire nut. Using your fingers, twist wire nut clockwise until tight. Check for tightness by pulling wires.

# INSTALLING DIMMERS

Part	Item	Description	Quantity
A		Dimmer	1
B		Wall Plates	1
C		P3 terminal connector	4

## The Tools You'll Need

- Screwdriver
- Pliers
- Electrical Tester



## Step 1. Turn power off

Locate your circuit breaker panel and turn off the power to each switch you are replacing



### WARNING

Risk of shock. Make sure the power to every switch you are replacing has been turned off before installation. Please call a professional electrician if you are not familiar with electrical work.


## Step 2. Verify power is off

Press each light switch at the location you're doing the installation to confirm the power is off. If a light turns on, return the panel to turn off the correct circuit. We recommend you to remove the faceplate from the old switch and use electrical tester to test all wires connected to the switch to ensure there is no voltage in the circuit.

You may need to turn off more than one circuit breaker.



### Step 3. Pull out old switch

Unscrew the old switch and pull it out of the wall. Do not remove any wires.

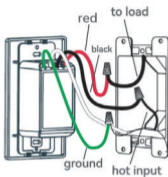


#### Step 4. Wire your new dimmer

- Connect the green or bare ground wire of the dimmer to the green or bare copper ground wire in the wall box.
- Connect the black dimmer wire to hot input wire that was removed from the switch.
- Connect one of the red dimmer wires to the fixture wire (load) that was removed from the switch.
- The white line is the neutral line, which is used to stabilize voltage, balance current, protect equipment, etc. in three-phase electricity.
- Use the wire connector to cover the remaining white wire on the dimmer.

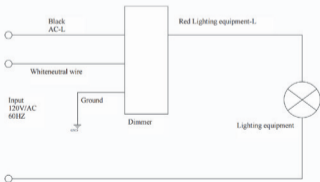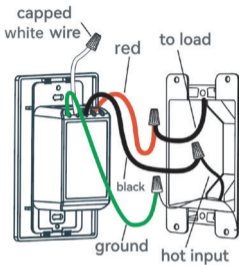

### Step 5. Insert dimmer inside the wall-box

- Carefully position all wires inside the wall-box, leaving enough room to insert the dimmer housing. Mount the dimmer securely inside the wall-box using the provided mounting screws.
- Mount the dimmer securely inside the wall-box using the provided mounting screws.

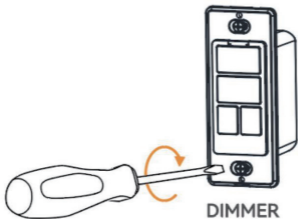



### Step 6. Turn power on





- Turn power on at circuit breaker or replace the fuse. Tryout your new dimmer.
- If you're satisfied with dimming range and light output of your bulbs, proceed to step 7.
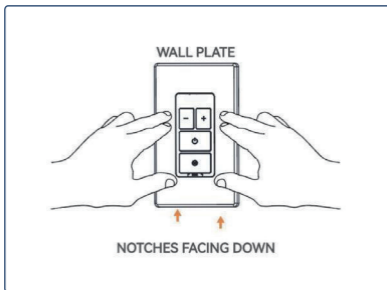
### Step 7. Instal wall plate

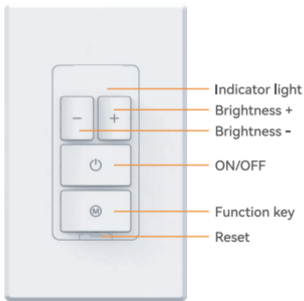Place the decorative wall plate over the installed mounting frame with the top frst then the bottom. Genty push wall plate to ensure fush fit.





Key	Functional description
Reset	Device reset button, press to restore the last saved state
	Hold the function key for 3 seconds to save the current state normally, In any state, if the function key is pressed briefly, it usually calls the last state
	Press the "on/off" key to turn the light on and off normally, press the "on/off" key twice quickly in the bright state to adjust light to the brightest state
	UP the light brightness
	Down the light brightness
Indicator light	Indicator light display area

### Special Note

Dimming performance may not be the same or similar to dimming of incandescent bulbs. Some possible dimming variations include but are not limited to: less dimming range than an incandescent bulb; dimming less smooth than an incandescent bulb; flicker or shimmer at certain light levels; and, buzzing or humming at certain light levels. Warranting the compatibility of this dimmer with LED lighting products, dimmable bulbs and replacement of the dimmer is the sole remedy for incompatibility, does not warrant the compatibility of this dimmer with any other particular LED lighting fixture.

- 120 Volt · 60Hz
- 600 Watt MAX incandescent
- 150 Watt MAX dimmable LED
- 150 Watt MAX CFL

## CUSTOMER SERVICE

### 01 30-Day Return Policy

If you're not completely satisfied with your purchase, simply return the merchandise via Amazon Orders. Unused merchandise can be refunded or exchanged within 30 days from the original purchase date.

### 02 3-Year Warranty

We guarantee your product is free from defects in product material and workmanship for three (3) years starting from the date of purchase during normal use of household conditions. If your appliance fails to operate properly within our warranty period, we will arrange a new replacement free of charge and cover all the shipping costs.

 
### 03 Quick Response within 12 Hours

If you are still unable to resolve the issue you are experiencing, please contact us immediately at our support email. It doesn't matter if the product has been installed, our customer support team will respond within 12 hours and assist you quickly and efficiently.

The most efficient way to confirm your problem to us is to attach a video illustrating your product issue.


# CONTACT US

## Step 1



Log into your Amazon.com account, click **"Returns & Orders"** on the top-right corner.

## Step 2

 

Find your order in the list and click **"View order details"**.


## Step 3

### Delivered yesterday



Click the **"Store Name"** following the Sold by, below the product title.

## Step 4

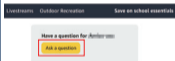


Click the yellow button **"Ask a question"**, on the top-right corner, to contact the seller.

## GET MORE SUPPORT

Should you experience any issues while operating any of our products, you can directly reach out to our Customer Support via Amazon Orders or you can send your inquiry to our Official Customer Support at:

 [support@amicolight.com](mailto:support@amicolight.com)

 +1(888) 676-1042 Monday - Friday from 9:00AM - 5:00PM (PT)

**MADE IN CHINA**